

Battery Terminal Fuse

RoHS

ELV

BATF-I

For 5 circuits



Battery Terminal Fuse

RoHS

ELV

BATF-L

For 2 circuits



Battery Terminal Fuse

RoHS

ELV

BATF-M

For 5 circuits




Battery Terminal Fuse

RoHS

ELV

BATF-N

For 6 circuits

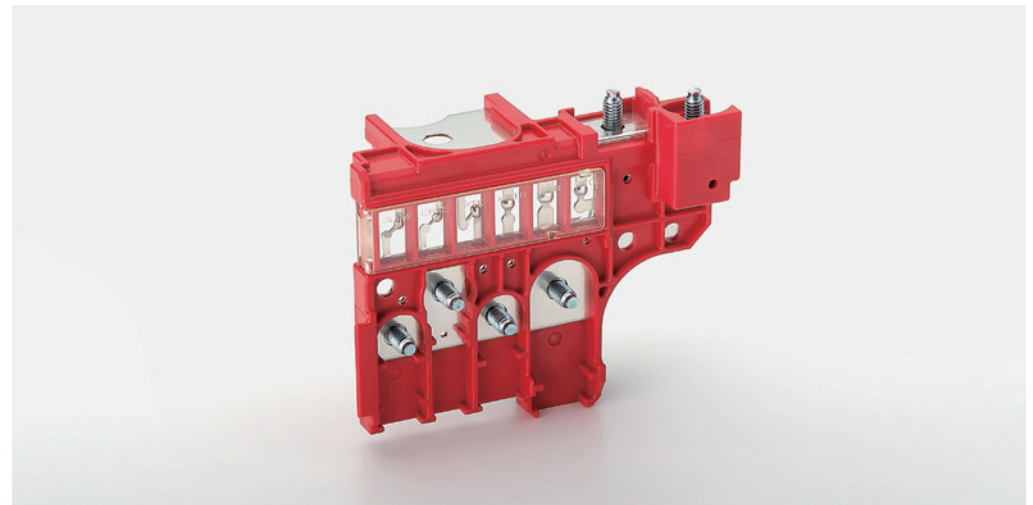

BATF